 


Installation Manual and Programming Guide

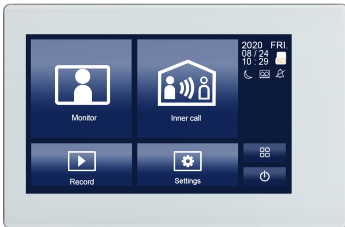

VIDEO INTERCOM SYSTEM
2-wire Door Station

Table of Contents

Set-Up/Installation

DIP Switches Settings.....	2
Electric Lock.....	3
Wiring.....	4-5
Programming.....	6
Parts and Functions.....	7-9
RFID Access Control.....	10

Using Your Intercom

Calling.....	6
Unlock.....	6
Monitoring.....	6
Ringtone.....	6
Inner Calls.....	6

Getting Started

Thank you for choosing our Video Intercom System! We are proud to introduce the new updated 2-wire system, providing a straightforward installation, and a simple, intuitive user experience.

This manual includes installation steps, programming instructions, and wiring diagrams.

Please read all instructions in this manual carefully, and check all components before installing them in the building. We recommend installing and testing one component at a time (ie. room stations) making it easier to detect a potential error before completion.

 
Attached at the end of this installation section is a detachable End-User manual.

Feel free to detach the page, make copies, and distribute to your tenants for their reference.





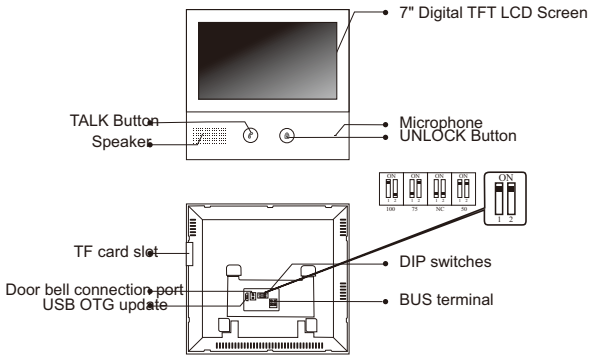

Parts and functions


Adjust the timer setting with Bit-4 and Bit-5 at the outdoor station (00 = Off/Off):



DIP switches

Bit state	Setting	Bit state	Setting
	Monitor at the end of the line		Reserved
	Monitor NOT at the end of the line		Reserved

 
Monitor mounting/Basic Wringing (With IP module)

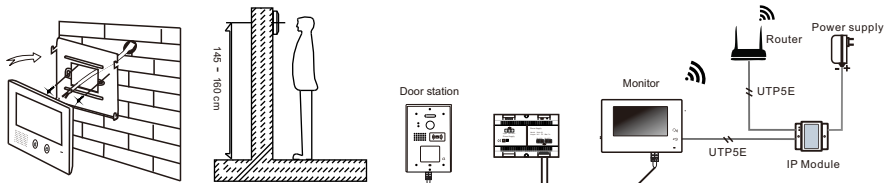

1. Using the screws to fix the mounting bracket on the wall.
2. Connecting the system correctly, then hang the monitor on the mounting bracket firmly.

Main menu

 Press anywhere of the screen on monitor in standby mode, the main menu page will be shown as follows:

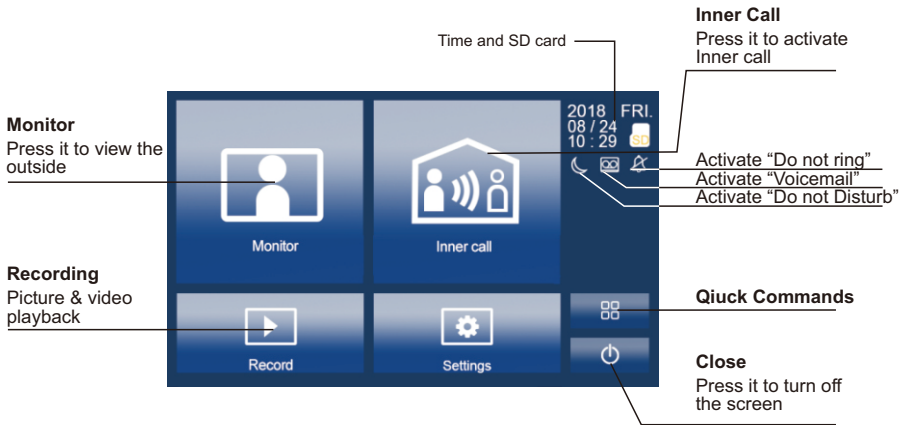

Basic door release operation




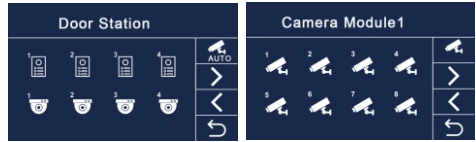 
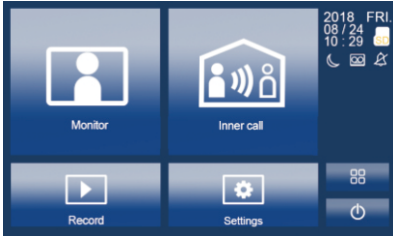 
Press **CALL** button on outdoor station, the indoor monitor rings, meanwhile, the screen displays the visitor's image.

Press **Answer** on monitor, you can talk with the visitor for 100seconds. Press **Close** to end the conversation. If nobody answers the call, the screen will be turned off automatically after 100 seconds.





During talking status, press **Unlock** to unlock the door. press **Switch camera** to switch to extra camera. (If there's extra camera in the system). Press **Close** to end the communication.

 
 
Main menu

Press  Monitor on main menu to enter the door camera switching mode, if multi door stations are installed, you can select the door station or CCTV camera you want to monitor.






Inner call

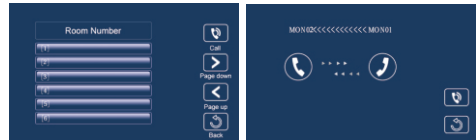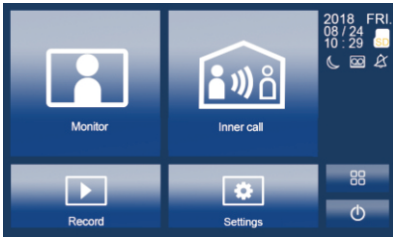User in one apartment can call other apartment in the system. Press  Inner Call to enter Inner call page, use   to select next page, press  to call another monitor.



Record-Picture / Video / Audio

 
Picture / video record: 3 seconds after the call was received, the monitor will record a video/picture automatically. Or you can press  Function, and then   to record the visitor's video/picture manually when the monitor in monitoring or calling state.

Audio Record: Audio recording will be activated in two situations.

2.1. When you call other apartments (Inner Call).

2.2. If you select SD card as storage location, the audio recording will be activated when the door station call the monitor.

Video/Picture/Audio playback: Press  Record on main menu to select Video/picture/Audio playback. Press   to select, press  to pause, press  to delete.

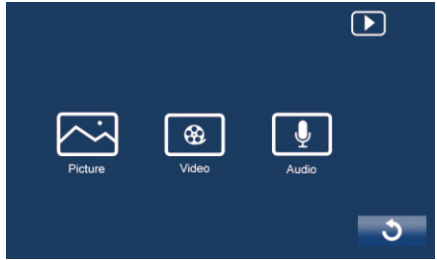




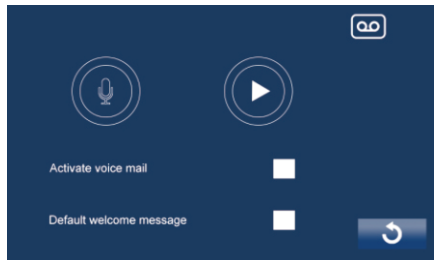 
Note:

1. Only supports writing speeds greater than 4M/S SD card.
2. A new SD card must be formatted by the monitor before you using it.
3. Without SD card, you could only store 6picture and 2 audio.
4. Up to 32G SD card.





Main menu

Press  Setting icon on main menu page, press  to enter next page, press  Voicemail to enter voicemail setting You can record your own welcome message by press the recording button



Main menu

Press  Settings on main menu page, press  Volume to enter volume adjusting page. Day time: 8:00 - 20:59, ringing volume adjusting range from 0-10. Night time: 21:00 - 7:59, ringing volume adjusting range from 0-10.





Screen settings

Press  Settings on main menu page, press  Color to enter color adjusting page.






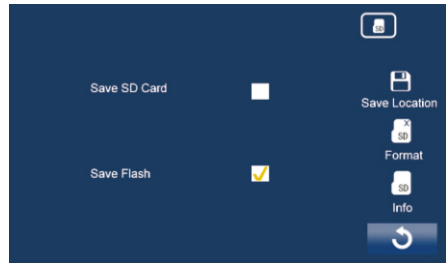 
Date & Time

Press Settings on main menu page, press  Time to enter date  time setting page.





Storage- SD card

Press  Storage to enter SD card setting page. Press  Format to format the SD card Press  Info to check the SD card storage information.



Optional

Personalized settings:

 
Press  Settings on main menu page, press  Optional to enter personalized setting page. You can adjust

Automatic / manual video recording

Automatic / manual photography


Turn on / off Inner Call

Turn on / off Do Not Disturb

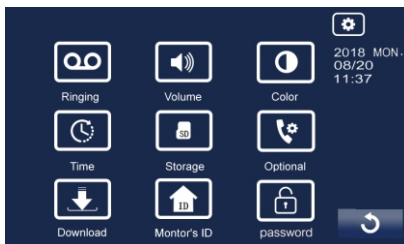


2. Door station & Extra Camera:

 If multi door stations and extra cameras installed in the system, you have to set the door station and camera quantity. The default setting is 1 door station and 0 camera.

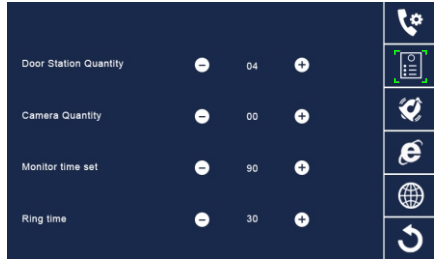



 Network (Divert Call Function, With IP Module Only):

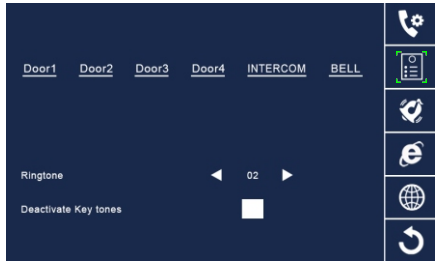Network call disable: Calls from door station will not diverted.




Date & Time

Press  Settings icon on main menu page, press  Language to enter language setting page. There're nine languages for optional: English, German, Italian, Spanish, Greek, French, Russian, Turkish and Dutch.



Password

Room number password is 111111(default). Modify room number password operation: input old password, setting new password. If you forget the room number password, you can press  button and input 111111, recover the room number password to 111111.





Specifications

Power supply for monitor:

Power consumption:

350mA :

Monitor screen:

Wiring:

DC 24V

Standby 15mAworking

7 inch digital color TFT

2 wires, non-polarity

