 


### \* Photograph Operations

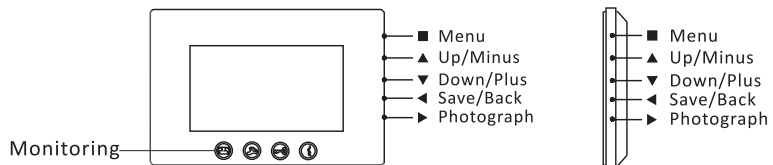

1. Set the date and time: firstly to press Monitoring button and then to press **■**, now to press **■** again to choose the Date, then to set Year by pressing **▲▼** and fix Year by pressing **■** again, so is the Month and the day and the time. Once all date and time are fixed, then to press **■** to move to the Exit and then to press **◀**, so date and time are set done.
2. Review pictures: firstly to press Monitoring button and then to press **▲▼** to review pictures.
3. Delete all pictures: firstly to press Monitoring button and then to press **■** to move to Delete all, now to press **▲** to choose YES/NO and confirm by pressing **■** again.
4. Delete picture one by one: firstly to press Monitoring button and then to press **▲▼** to review pictures, then to press **■** to choose this picture YES/NO, now to press **■** again to delete.
5. Manually photograph: firstly to press Monitoring button, and then to press **▶** will take one picture and save it automatically. This can save 240pcs pictures.
6. ATTENTION: Operation time is limited within 30s, or the setting will be failed overtime.

# INDOOR MONITOR

---

## User Manual

### 3. INSTALLATION

<p>All monitors are surface-mounted, put the mounting bracket on the wall firstly will fix the monitor well.</p>	<p>The standard height of installing the outdoor station should be from 145cm to 160cm away from the ground.</p>







### 4. SPECIFICATION

1. Audio Frequency output: >5mw
2. Audio Frequency input: 500-3400HZ + -3dB
3. TFT Color display
4. Half Tone : >8 grade
5. Power consumption : Standby : 0w      Working: 8w
6. Working temperature: -20 degree to +60 degree

---

**Please read this user manual carefully before installation**

# 1. ALL BUTTONS' FEATURES

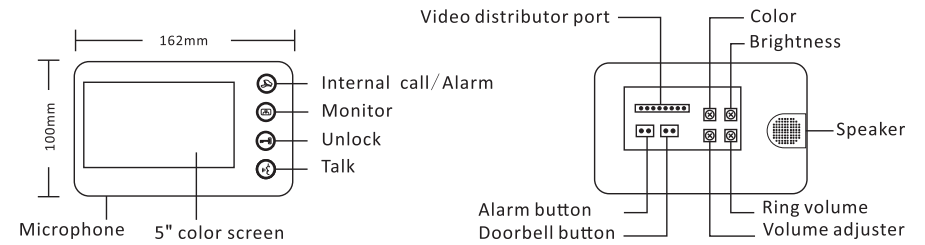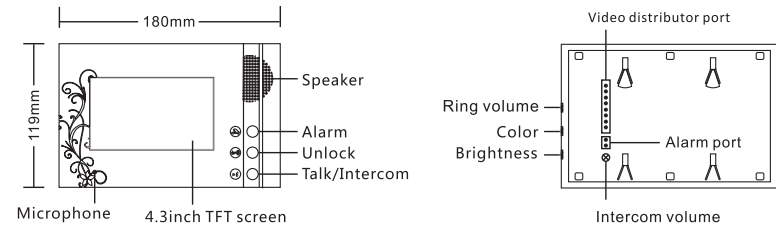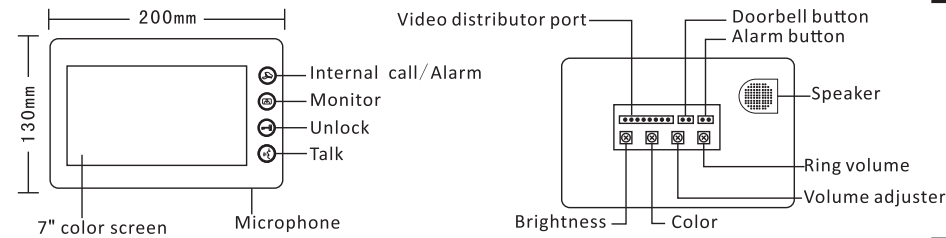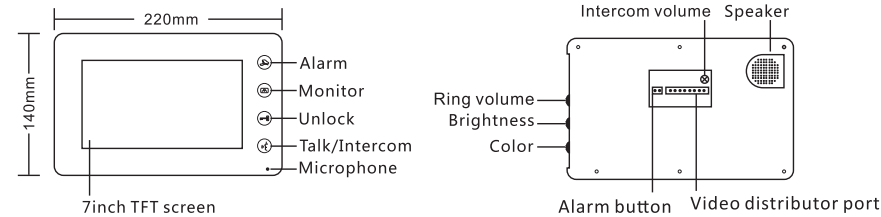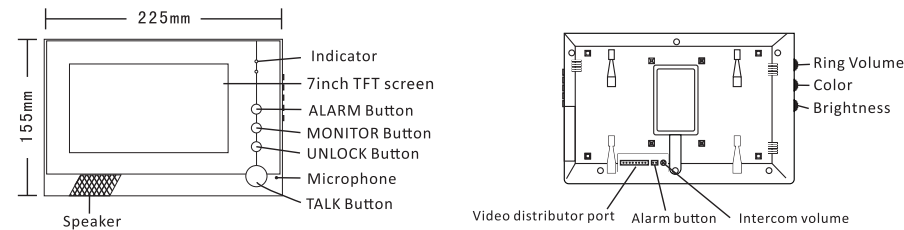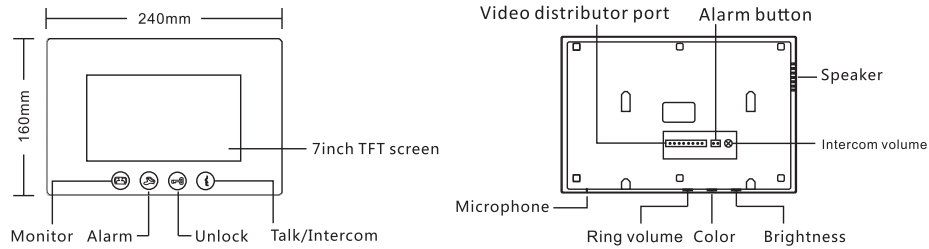

# 2. USING THE VIDEO DOOR PHONE


## A. Outdoor Station

1. Visitor can directly dial the room number to call the apartments on the panel. Press # to cancel the calling.
2. There is a countdown of 45 seconds on the display after talking to the monitor. To press any number of 1 to 9 to delay the conversation time.
3. Press 7 \* to call the concierge station from the outdoor station.
4. If the outdoor station keypad doesn't work properly, keep press # for 3 seconds to restore the keypad.

## B. Indoor Monitor

1. When the outdoor station is calling, the indoor monitor rings and the visitor's image will be seen on screen. Press TALK button to talk with the visitor. If nobody answers the call, the screen will automatically turn off in 45 seconds.
2. During the conversation, press UNLOCK button to unlock the door.
3. Press MONITOR button on monitor in standby mode, the screen will display the view of the outdoor station. Press MONITOR button again to turn off the monitor.
4. If there is a concierge station in the system. For emergency help, press ALARM button to call the concierge station. To answer a call from concierge station, press TALK button. There is no picture displayed when the monitor talking to the concierge station.
5. Set the calling ring tone: under standby mode, press UNLOCK button for 2 second to start setting the ring tone. Press ALARM button, 16 pieces ring tones will be displayed, choose one you want, then press UNLOCK button again to save and exit.

## C. Wiring

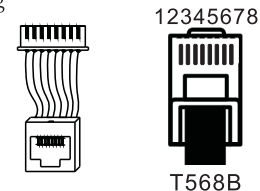

- |                |               |
|----------------|---------------|
| 1 White-orange | 5 White-blue  |
| 2 Orange       | 6 Green       |
| 3 White-green  | 7 White-brown |
| 4 Blue         | 8 Brown       |