



Please read all of these instruction before installation

This ID Proxy Reader can save 2720pes ID card that can >e re-activeafter being authorized by the Master card under intercom operation

1. Change Admin Password

* Under the infrared remote control situation, to press "*" & "1" , a long beep will ring, red light is off, green light is on, then to input four-digit password, press "#", a long beep will ring, the red light is flashing, it shows the password is changed completely. If you want to change the current password again, input enter four-digit password, then press "#", so the password is changed again . Press "*" then a number key to select other operations, or exit the infrared remote control to enter standby mode.

2. Swipe the Master card to re-active the slave card

* Under the infrared remote control mode, press "*" , then "2", a long beep will ring red light is off, green light is on, at intervals of about 1.5 seconds beep will ring, indicating to swipe the slave cards, each long beep and red light flashing indicate that the card has been successfully added, up to 2720 user cards. If long beep rings for 6 times, it said card is full, and the operation is failed. To select other operations by pressing "*" and a number key, or "EXIT" to exit the infrared remote control to enter standby mode.

3. Cancel the valid card

* Under the infrared remote control mode, press "*" , then "3", a long beep will ring and the red light is off, but the green light is on, at intervals of about 1.5 seconds beep will ring, then to swipe the user card, if the card is legitimate, and the long beep will ring and the red light is flashing that shows the card has been deleted If beep rings by 3 times, and it shows the card is illegal. To select other operations by pressing "*" and a number key, or "EXIT" to exit the infrared remote control to enter standby mode.

4. To delete the Valid card by ID Account

* Under the infrared remote control mode, press "*" , then "5", a long beep will ring and the red light is off, but the green light is on, then to input this ID Account of 10-digit, then to press "#" if the card is legitimate, and the long beep will ring and the red light is flashing that shows the card has been deleted If beep rings by three times, and it shows the card is illegal. To select other operations by pressing "*" and a number key, or "EXIT" to exit the infrared remote control to enter standby mode.

5. Cancel all valid card

* Under the infrared remote control mode, press "*" , then "6", a long beep will ring and the red light is off, but the green light is on, then to press "1" + "2" + "#", and the long beep will stop this, shows the all valid cards have been deleted. To select other operations by pressing "*" and a number key, or "EXIT" to exit the infrared remote control to enter standby mode.

6. Swipe the Master card to re-active the slave card

* Under the infrared remote control mode, press "*" , then "2" , a long beep will ring and the red light is off, but the green light is on, at intervals of about 1.5 seconds a beep will ring, indicating to swipe the slave cards, each long beep and red light flashing indicate that the card has been successfully added, up to 2720 usercards. If long beep rings for 6 times, it said card is full, and the operation is failed. To select other operations by pressing "*" and a number key, or "EXIT" to exit the infrared remote control to enter standby mode.

7. Cancel the valid card

* Under the infrared remote control mode, press "*" , then "3" , a long beep will ring and the red light is off, but the green light is on, at intervals of about 1.5 seconds a beep will ring, then to swipe the user card, if the card is legitimate, and the long beep will ring and the red light is flashing that shows the card has been deleted. If beep rings by 3 times, and it shows the card is illegal. To select other operations by pressing "*" and a number key, or "EXIT" to exit the infrared remote control to enter standby mode.

8. To delete the Valid card by ID Account

* Under the infrared remote control mode, press "*" , then "5" , a long beep will ring and the red light is off, but the green light is on, then to input this ID Account of 10-digit, then to press "#" if the card is legitimate, and the long beep will ring and the red light is flashing that shows the card has been deleted. If beep rings by three times, and it shows the card is illegal. To select other operations by pressing "*" and a number key, or "EXIT" to exit the infrared remote control to enter standby mode.

9. Cancel all valid card


* Under the infrared remote control mode, press "*" , then "6" , a long beep will ring and the red light is off, but the green light is on, then to press "1" + "2" + "#", and the long beep will stop this, shows the all valid cards have been deleted. To select other operations by pressing "*" and a number key, or "EXIT" to exit the infrared remote control to enter standby mode.

10. Set the unlock time

* Set 0.1 second as a unit between 0 & 25.

Input the right unlock time on the controller, the right calculate way is "unlock time / 0.1 ", such as, if you set 1 as the unlock time, then you will input 10 on the controller.

* Under the infrared remote control mode, press "*" , then "7" , a long beep will ring and the red light is off, but the green light is on, then to input 1-3 digits number, this number is less than 250 and the long beep will ring and the red light is flashing that shows the setting is successful. If beep rings by 3 times, and it shows the imputed 3 digits number is over 250. To select other operations by pressing "*" and a number key, or "EXIT" to exit the infrared remote control to enter standby mode.

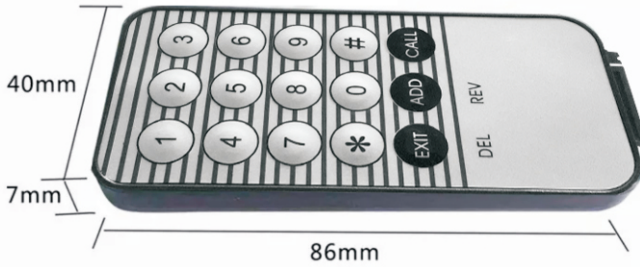

11. Specification:

User Capacity:	2720pcs ID card
Power Supply:	12V / 30mA
Radio Technology :	125KHz Proximity Card
Read Range :	2~6 cm
Unit Weight :	260g
Proximity Card Reader :	EM